



## INSTALLATION STEPS

1. DIG A 4-5 INCH DEEP TRENCH ALONG EDGE OF LAWN.
2. PLACE EDGE EX EDGING INTO TRENCH. THE BOTTOM "V" LIP OF THE EDGING SHOULD BE FACING GROUND COVER OR PLANTING AREA.
3. POUND STAKE, PIERCING INTO EDGING AT 45 DEGREE ANGLE. INSTALL STAKE AT EVERY 5' (CLOSER AT CURVES).
4. FOLLOW STEPS 4A - 4D TO CONNECT EDGING.
5. FILL BACK TRENCH AND TAMP DOWN.


### STEPS FOR CONNECTING EDGINGS TOGETHER




4A. CUT APPROXIMATELY 5 INCHES OFF THE ROUND TUBE FROM ONE OF THE EDGING.

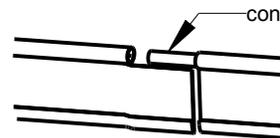

4B. USE A CONNECTOR TUBING TO ALIGN BOTH ENDS OF EDGING.



4C. CONNECT THE TWO EDGING TOGETHER



4D. FOLLOW STEP 3 TO SECURE THE EDGING

PRODUCT NUMBER	NOMINAL DESCRIPTION	COLOR	ACTUAL DIMENSION D x H x L	RECOMMENDED ACCESSORIES
100060052	20'	BLACK	1.12 x 5.2" X 20'	ALL LISTED ON NEXT CHART

### INCLUDED ACCESSORIES FOR EACH EDGE EX 20' BLACK TUBE EDGING

DESCRIPTION AND QUANTITY	ACTUAL DIMENSION D x H x L	PRODUCT NUMBER
GALVANIZED METAL STAKE / 4	.62" x 1.8" x 9"	100059577
CONNECTOR TUBING / 1	.84" DIA. x 7"	

# EDGE EX BLACK TUBE EDGING INSTALLATION GUIDE

MADE IN USA by EPIC PLASTICS  
104 E. TURNER RD, LODI CA 95240  
www.epicplastics.com

EDGE EX EDGING IS INTENDED FOR NON-STRUCTURAL USE ONLY